


STANDARD DESIGN TYPICAL FIRE HYDRANT SETTING

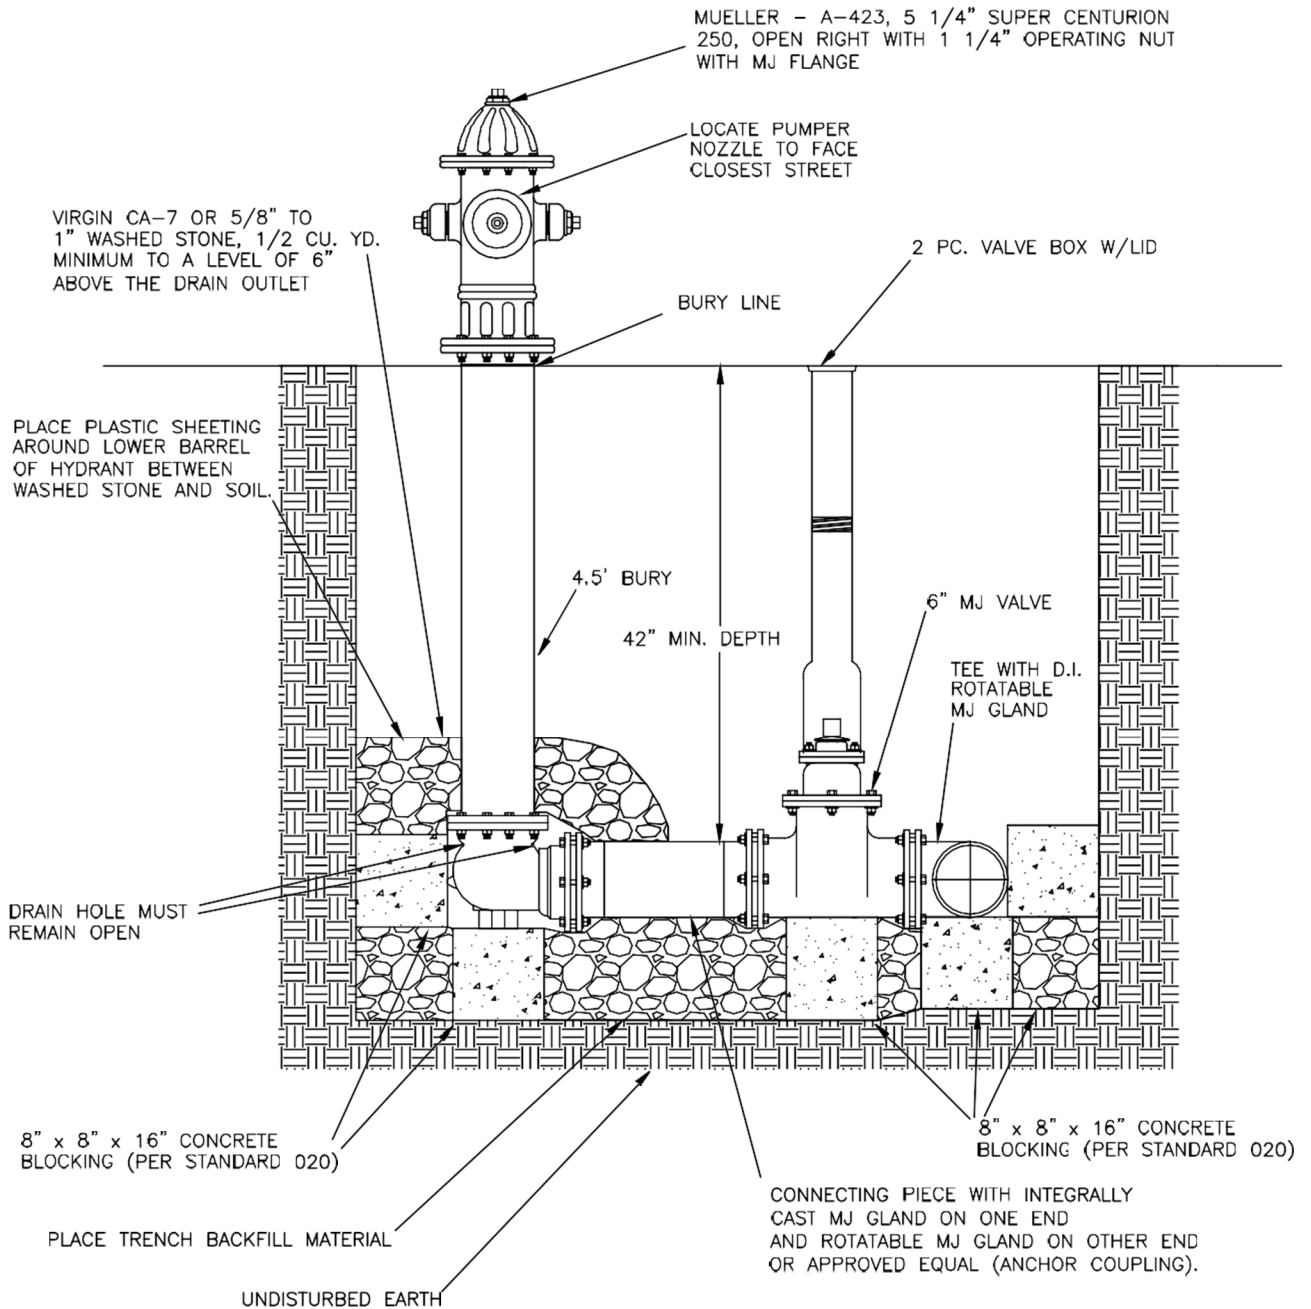

1. POLYWRAP ALL FITTINGS AND PIPE
2. INSTALL POLYWRAP OVER BONNET BOLTS ON THE VALVE.
3. MUELLER RW VALVE, OPEN RIGHT.
SEE STANDARD #4009

CITY OF DECATUR, ILLINOIS
WATER MANAGEMENT
DEPARTMENT

ADOPTED JANUARY 6, 2023

DIRECTOR OF PUBLIC WORKS

ISSUED: 1/6/23

REVISIONS

BY DATE

F.W.T. 12/15/81

SHOE 9/15/89

R.W.D. 4/9/97

RNB 12/19/02

KEZ 1/6/23

STANDARD #4000